


# Installation proposal Foot bath sputtering system for 1 basin

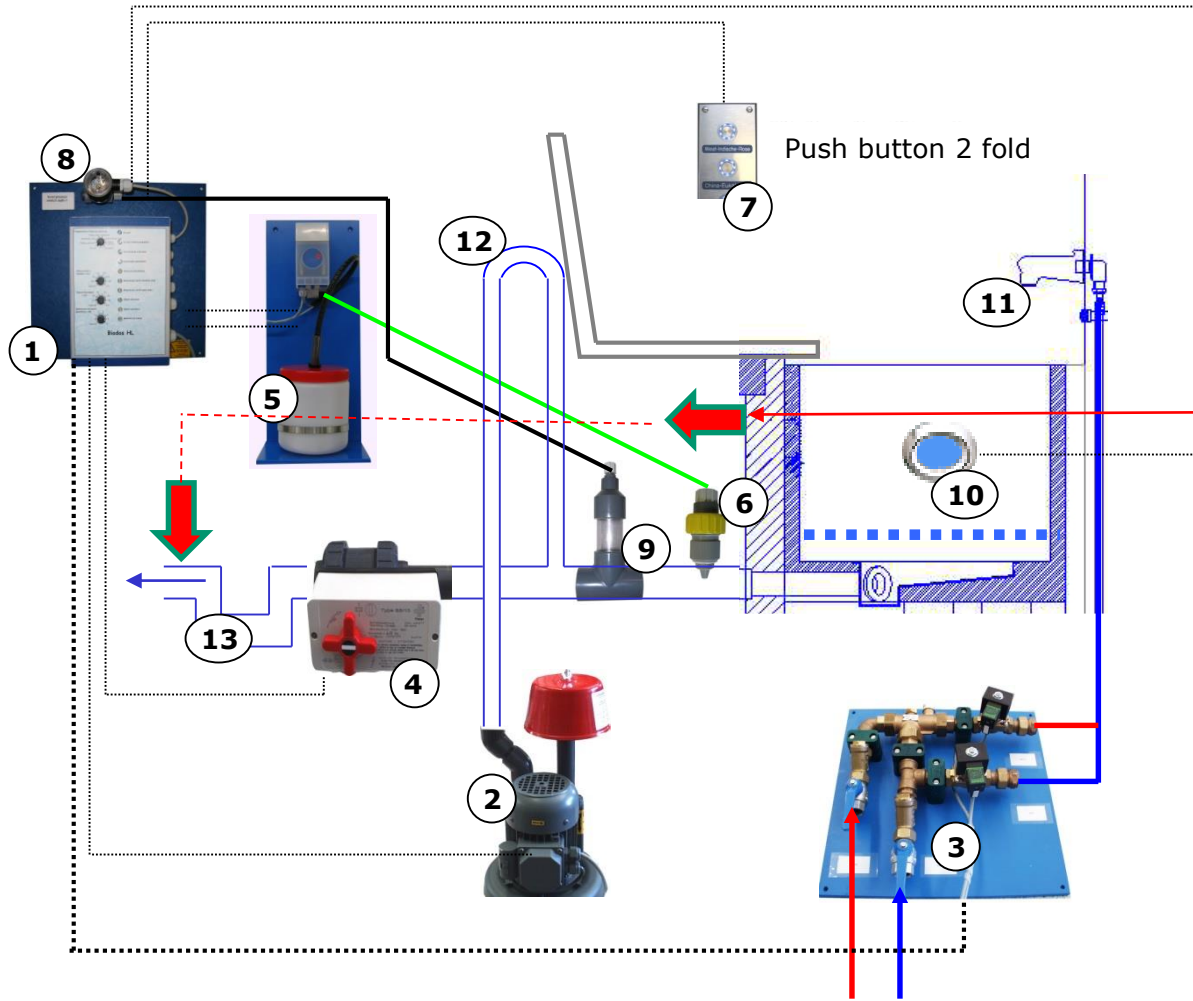

Push button 2 fold

Overflow of the bassin has to be considered. Overflow to be connected to the drain after motor ball valve!!!

Warm water supply 3/4"

Cold water supply 3/4"

- 1= Controller
- 2= Air pump
- 3= Water part
- 4= Motor ball valve
- 5= Dosing pump for disinfection
- 6= Dosing valve
- 7= Push button
- 8= Pressure switch
- 9= Pressure taking device
- 10= Illumination (option)
- 11= Water inlet
- 12= Air loop over water level
- 13= Siphon

# Einbauvorschlag Fußsprudelbecken

- 1= Steuerung
- 2= Seitenkanalverdichter
- 3= Wasserteil
- 4= Motorkugelhahn
- 5= Dosierpumpe für  
die Desinfektion
- 6= Dosierventil
- 7= Abruftaster
- 8= Druckschalter
- 9= Druckabnahmestelle
- 10= Beleuchtung optional
- 11= Wassereinlauf
- 12= Luftschleife über Wasserniveau
- 13= Siphon